# SERVICE MANUAL

INFRARED REMOTE CONTROL SYSTEM RECEIVER

# **SANSUI RS-7**



#### ● SPECIFICATIONS

Receiver Input sensitivity and impedance

Output level and impedance

.......... 450 mV/600 ohms

Distortion at 1 kHz  $\,$  .  $\,$  0.07 %

Signal to noise ratio . . 70 dB Frequency response . . 20 to 50,000 Hz

+0 dB, -1.0 dB

Power consumption . . 32 W Power requirements . .  $120/220 \sim 240 \text{ V}$ 

60/50 Hz

For U.S.A. and Canada

87 mm (3-7/16") H

218 mm (8-5/8") D

Weight . . . . . . . . . 2.9 kg (6.4 lbs) net

3.5 kg (7.7 lbs) packed

Transmitter

Coverage range . . . . 9 m (within  $\pm 30^{\circ}$ ) Dimensions . . . . . 66 mm (2-5/8") W


23 mm (15/16") H

168 mm (6-5/8") D Weight . . . . . . . . 0.2 kg (0.4 lbs) net

\* Design and specifications subject to changes without notice for improvements.



# 1. BLOCK DIAGRAM < Remote Control Receiver>

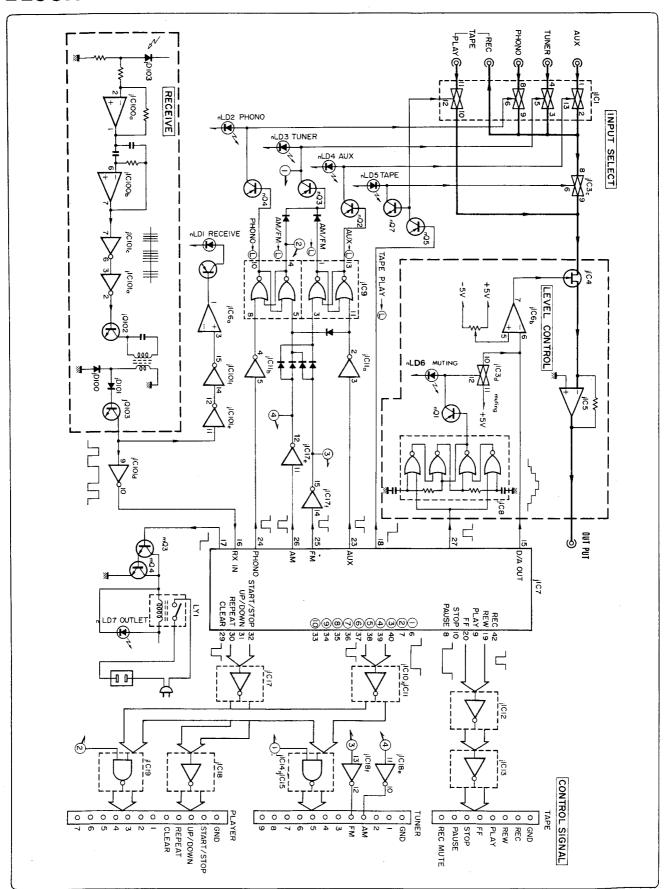

1

# 2. DESCRIPTION OF OPERATION

The equipment, RS-7, is an infrated remote control system composed of the combination of the receiving LSI, TC9134P, and the transmission LSI, TC9132P, making it possible to control the commands of 32 functions.

Since a code sen sing circuit is provided for code checking with the transmitter, interference from other equipments can be prevented.

#### 2-1. Operation of transmitter, RS-7

The transmitter, RS-7, transmits the remote control command signals of 32 functions to the remote control receiver, RS-7 by means of the CMOS LS (TC-9132P) for remote control transmission.

The command signals of 32 functions are generated when the timing signals, T1 to T4, of No. 1 to No. 4 pin output of the LSI, TC9132P are supplied as the input to No. 5 to No. 10, No. 12 and No. 13 pins of the LSI (K1 to K8) in martrix combination. (See Table 5-1 on Page 5.) During transmission of these command signals, the carrier wave is subjected to pulse modulation for the output.

The transmission signal output is applied to the luminous diode (EL-1L2) and is transfered to the remote control receiver by infrared

#### 2-2. Operation of remote control receiver, RS-7

The remote control receiver comprises a receiving signal input circuit, control circuit by LSI (TC9134P), input switching circuit, and a LED display circuit and level control circuit.

The transmission signal from the transmitter is received by the receiving element and the photo-diode (jD103), and amplified by the OP amplifier (jIC100), then only the command signals are taken out as the carrier wave is eliminated by the demodulator.

After the wave form shaping by the inverter (jIC101), the command signal input is supplied to No. 16 pin (RX<sub>IN</sub>) of the control LSI, TC9132P. As the result, the specified terminals of the control LSI (SP1  $\sim$  22, HP1  $\sim$  6, EX1 and 2, D/A out, and CP1 and 2) produce single signal, continuous signal, D/A control (Up/Down) signal and cyclic signal corresponding to respective command signals.

Cyclic signal: The output is reversed when this signal is received.

Continuous signal: While this signal is given from the trans-

mitter, (L) level is maintained.

Single signal: When this command signal is applied, the


impulse of (L) level is given as the output.

#### • Initializing at power making

For the initial setting of internal condition of LSI and for presetting of D/A converter, No. 12, 13 and 14 pins of LSI are kept at (L) level at the time of power making. In actual circuits, capacitors are attached to No. 12, 13 and 14 pins.

## 3. INTERIOR BLOCK DIAGRAM OF IC


#### 3-1. TC9132P

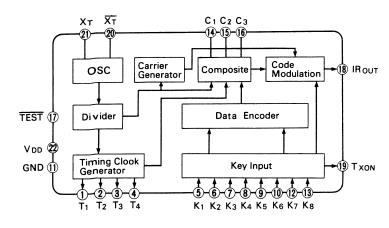


#### Description of terminals

Pin No.	Symbol	Terminal name	Function and operation
1~4	T <sub>1</sub> ~ T <sub>4</sub>	Timing signal output	Timing digit output terminal for key matrix
5~10 12, 13	K <sub>1</sub> ~ K <sub>8</sub>	Key input	Key input terminal for key matrix; capable of issueing 32 instructions with T <sub>1</sub> ~ T <sub>4</sub> x K <sub>1</sub> ~ K <sub>8</sub> .
14~16	C <sub>1</sub> ~ C <sub>3</sub>	Code bit input	Code bit input terminal for code matching between transmission side and receiving side; good for up to 7 kinds.
17	TEST	Test terminal	Usually set at "H" level.
18	IR оυт	Transmission output	Transmission signal output; modulation with carrier wave of 38 kHz based on the assumption of 16 bits per cycle.
19	TXon	On-transmis- sion indicator output	Usually of "H" level, but it is of "L" level during transmission.
20, 21	Χτ, <del>Χ</del> τ	Terminal for oscillator	Terminal for oscilla- tor; used for 455 kHz ceramic oscilla- tors or the like.

#### 3-2. TC9134P

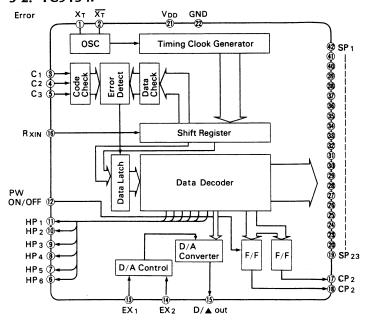

#### 3-3. MSM4066RS

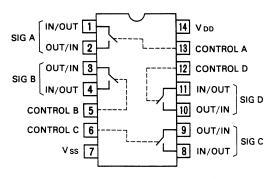

#### • Explanation of functions of each terminal <TC9134P>


LAPIAI	iation of fun	ictions of each terminal <1C31341/
Pin No.	Symbol	Functions
1, 2	$X_T, \overline{X_T}$	Oscillator terminal for timing. Used for connection of a ceramic oscillator of 455 kHz or an L.C.
3~5	C <sub>1</sub> , C <sub>2</sub> , C <sub>3</sub>	Code specifing input terminal. The code of the transmitter is compared with the code which is set with this terminal, and the input is accepted only when the codes are matched.
6~11	HP <sub>6</sub> ∼HP <sub>1</sub>	Continuous signal output terminal. The output from this terminal is kept at "L" level while a receiving signal is input.
		Being transmitted HP <sub>1</sub> ~ 6
12	PW on/off	External control input terminal of cyclic output $CP_1$ . It is possible to control $CP_1$ from the receiver, not only from the transmitter. $CP_1$ reverses at "L" level.
13~15	EX <sub>1</sub> EX <sub>2</sub> D/A out	External control input terminal for a D/A converter. EX <sub>1</sub> is for up and EX <sub>2</sub> is for down. Operation commences at "L" level. D/A converter output terminal. Outputs V <sub>DD</sub> as divided into 32 segments.
16	R <sub>X IN</sub>	Receiving signal input terminal. Instruction signals less carrier signals are input.
17 18	CP <sub>2</sub> CP <sub>1</sub>	Cyclic signal input terminal.  The output reverses when a signal is received. CP <sub>1</sub> can also be controlled from the IC for receiving.
19 20 23~41	SP <sub>22</sub> ~ SP <sub>1</sub>	Single pulse output terminal.  When an instruction signal is inout, a pulse of "L" level is produced only for the specified output.  Approx.  140 ms
21, 22	VDD, GND	Power supply voltage impressing terminal.

# RS-7 RS-7

# 4. PARTS LOCATION & PARTS LIST

4-1. F-3500 Remote Control Circuit Board (Stock No. 00634001)

•Since some of capacitors and resistors are omitted from parts lists in this Service Manual, refer to the Common Parts List for capacitors & resistors, which was appended previously to Sansui Manual.

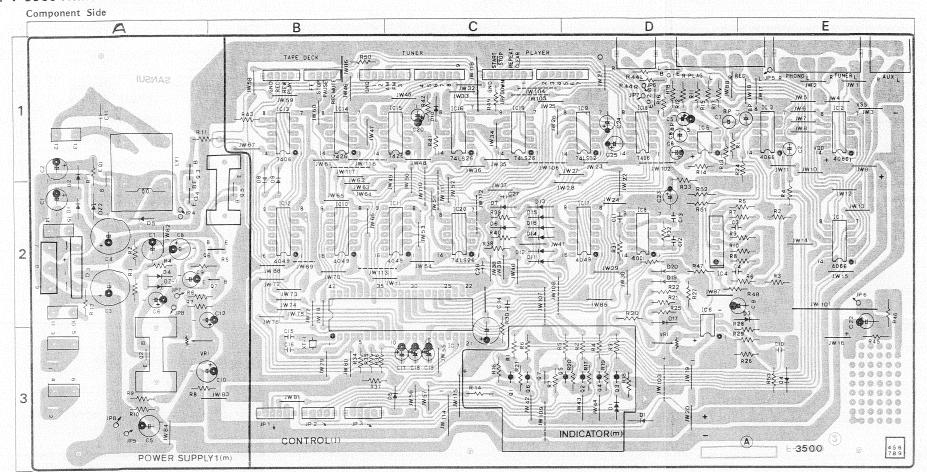

Parts List		
Parts No.	Stock No.	Description
●Transistor jQ1 jQ2	07197000, 1 07194700, 1 07197000, 1 07194700, 1	2SA733A R,Q 2SA1015 Y,GR 2SA733A R,Q 2SA1015 Y,GR
•IC  jIC1  jIC2  jIC3  jIC4  jIC5  jIC6  jIC7  jIC8  jIC9  jIC10  jIC11  jIC12  jIC13  jIC14  jIC15  jIC18  jIC17  jIC18  jIC19  jIC20	07264600 07264600 07264600 03703605 03607700 07263800 03609500 07265400 03611800 03611800 07265700 07265500 07265600 07265600 07265600 07265600 07265600 07265600	MSM4066RS MSM4066RS MSM4066RS μPA68H NJM4558D TC-9134P MSM4001RS MB-74LS02 MSM4049RS MSM4049RS MSM4049RS HD-7406 HD-7426 HD-7426 MB-74LS26 MSM4049RS HD-7406 MB-74LS26 MB-74LS26 MB-74LS26 MB-74LS26 MB-74LS26
●Diode jD1 jD2 jD3	03111600 03111600 03111600	1S2473D 1S2473D 1S2473D


Parts No.	Stock No.	Description
jD4	03109700	1N60-P
jD5	03109700	1N60-P
jD6	03109700	1N60-P
jD7	03109700	1N60-P
jD8	03109700	1N60-P
jD9	03109700	1N60-P
jD10	03109700	1N60-P
jD11	03109700	1N60-P
jD12	03109700	1N60-P
jD13	03109700	1N60-P
jD14	03109700	1N60-P
jD15	03109700	1N60-P
jD16	03109700	1N60-P
jD17	03111600	1S2473D
jD19	03111600	1S2473D
jD20	03109700	1N60
jC1	00306800	1μF 50 V E.B.
iC2	00306800	1μF 50 V E.B.
iC7	00306800	1μF 50 V E.B.
iC8	00306800	1μF 50 V E.B.
jC9	00306800	1μF 50 V E.B.
jVR1	07238900	$50k\Omega$ (B) Volume, preset level adj.
jXO1	07274000	Ceramic Filter CSB 550A
jL1	49000800	Inductor
●Transistor		
mQ1	03085201,2	2SD438 E, F
mO2	03032302.3	2SB507 E

Parts No.	Stock No.	Description
mQ3 mQ4 mQ5	03059501,2 03085201,2 03083902,3	2SD438 E, F
mQ6 mQ7	03059501,2	2SC945 Q, P 2SC945 Q, P
•Diode	00447700	105.0
mD1 mD2 mD3 mD4	03117700 03117700 03117000 03111600	10E-2 RB-152
•Zener Dioc	le	
mDZ1 mDZ2	03185800 03160600	RD5.1E-B EQA01-22R
mR12	00179100	100Ω 1W N.I.R.
mC11	00386000	0.01μF 150 V C.C.
mVR1	07241200	5 kΩ (B) Volume, a.v.r.
mLY1	07299500	Relay
●Transistor		
nQ1		2SA733A R,Q
nQ2		2SA733A R, Q
nQ3 nQ4		2SA733A R,Q 2SA733A R,Q
nQ5		2SA733A R.Q 2SA733A R.Q
nQ6		2SA733A R,Q
nQ7		2SC945 Q, P

#### 4-2. F-3501 Receiver & Indicator Circuit Board


Component Side

(Stock No. 00634101)

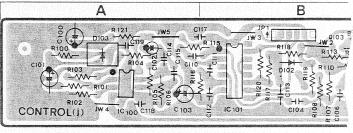


Parts No.	Stock No.	Description
	07581900	LED Holder 1P
<ul><li>Transistor</li></ul>		
jQ102	03059501,2	2SC945 Q,P
JQ103	03059501,2	2SC945 Q,P
•IC		
jIC100	03607700	NJM4558D
jIC101	03611800	MSM4049RS
●Diode		
jD100	03109700	1N60-P
jD102	03111600	1S2473D
jD103	07265900	Photo Diode NJL6143A
jL101	07264100	Filter Coil 38 kHz
nLD1	07246200	Light Emitting Diode SEL1710K
nLD2	07246200	Light Emitting Diode SEL1710K
nLD3	07246200	Light Emitting Diode SEL1710K
nLD4	07246200	Light Emitting Diode SEL1710K
nLD5	07243200	Light Emitting Diode GL-5HD5
nLD6	07246200	Light Emitting Diode SEL1710K
nLD7	07243200	Light Emitting Diode GL-5HD5

0.0		
C.R Carbon Resistor	E.L L	ow Leak Electrolytic Capacito
S.R Solid Resistor	E.B	i-Polar Electrolytic Capacitor
Ce.R Cement Resistor	E.BL L	ow Leak Bi-Polar Electrolytic
M.R Metal Film Resistor	C	apacitor
F.R Fusing Resistor	Ta.C	antalum Capacitor
N.I.R Non-Inflammable Resistor	F.C F	ilm Capacitor
C.C Ceramic Capacitor	M.P M	letalized Paper Capacitor
C.T Ceramic Capacitor, Temperature	P.C Po	Divstyrene Capacitor
Compensation	G.C	immic Capacitor
E.C Electrolytic Capacitor		

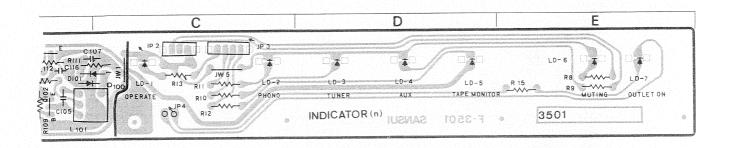

# 5. SCHEMATIC DIAGRAM & PARTS LIST OF TRANSMITTER

#### 5-1. Parts List of Transmitter

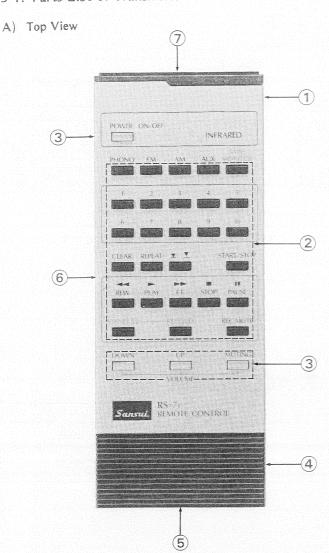

Parts List <Top View>

Parts No.	Stock No.	Description
1	07756800	Panel Plate
2	07725200	Knob (brack)
3	07725100	Knob (white)
4	07725400	Transmitter Case (top)
5	07725000	Lid of Battery Case
6	07725500	Transmitter Case (bottom)
7	07725300	Filter
	07274700	Spacer
	07274800	φ2 x 6 Tapping Screw

#### B) 12KHO15A Transmitter Circuit Board


n	9 5	-+
Parts	1 1	SL

Parts No.	Stock No.	Description
<ul> <li>Transistor</li> </ul>		
TR1,2	07197001,2	2SA733 Q,P
TR3	07206900,1	2SC2001 M, L
TR4	07197001,2	2SA733 Q, P
TR5	03059501,2	2SC945 Q, P
TR6	07197001,2	2SA733 Q,P
•IC		
	07263900	TC9132P
●Diode		
	07274300	1K60
∗LED		
	07274100	EL-1L2
	07274000	Ceramic Filter (CSB550)
	07273800	Key Switch

•Note: The circuit board, 12KH015A is not supplied as the assembled. However, the individual parts on the circuit board are provided by orders.


# RS-7

### 5-2. Schematic Diagram <Transmitter>

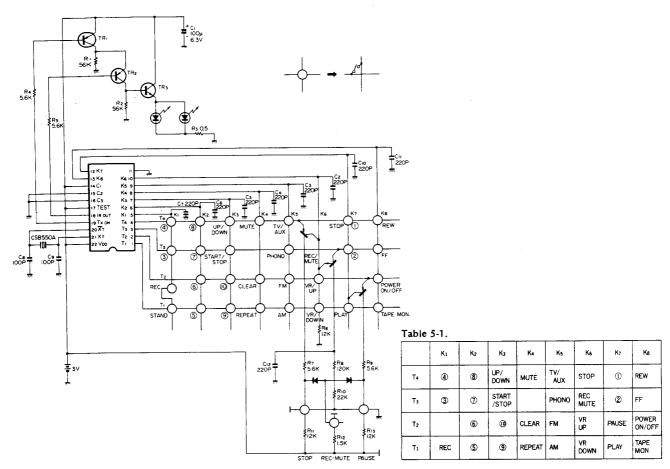


# 6. PACKING LIST

Parts No.	Stock No.	Description
1	07599500	Vinyl Cover
ż	07661900	Styrofoam Packing
3	07732000	Carton Case (Silver Model)
•	07731900	Carton Case (Black Model)

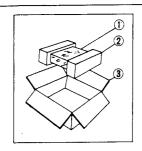


# 7. ACCESSORY LIST

Stock No.	Description	
07670200	Operating Instruction	
38103200	PJP Cord	
07299200	Connection Cable Set	
	Dry Battery x 2	

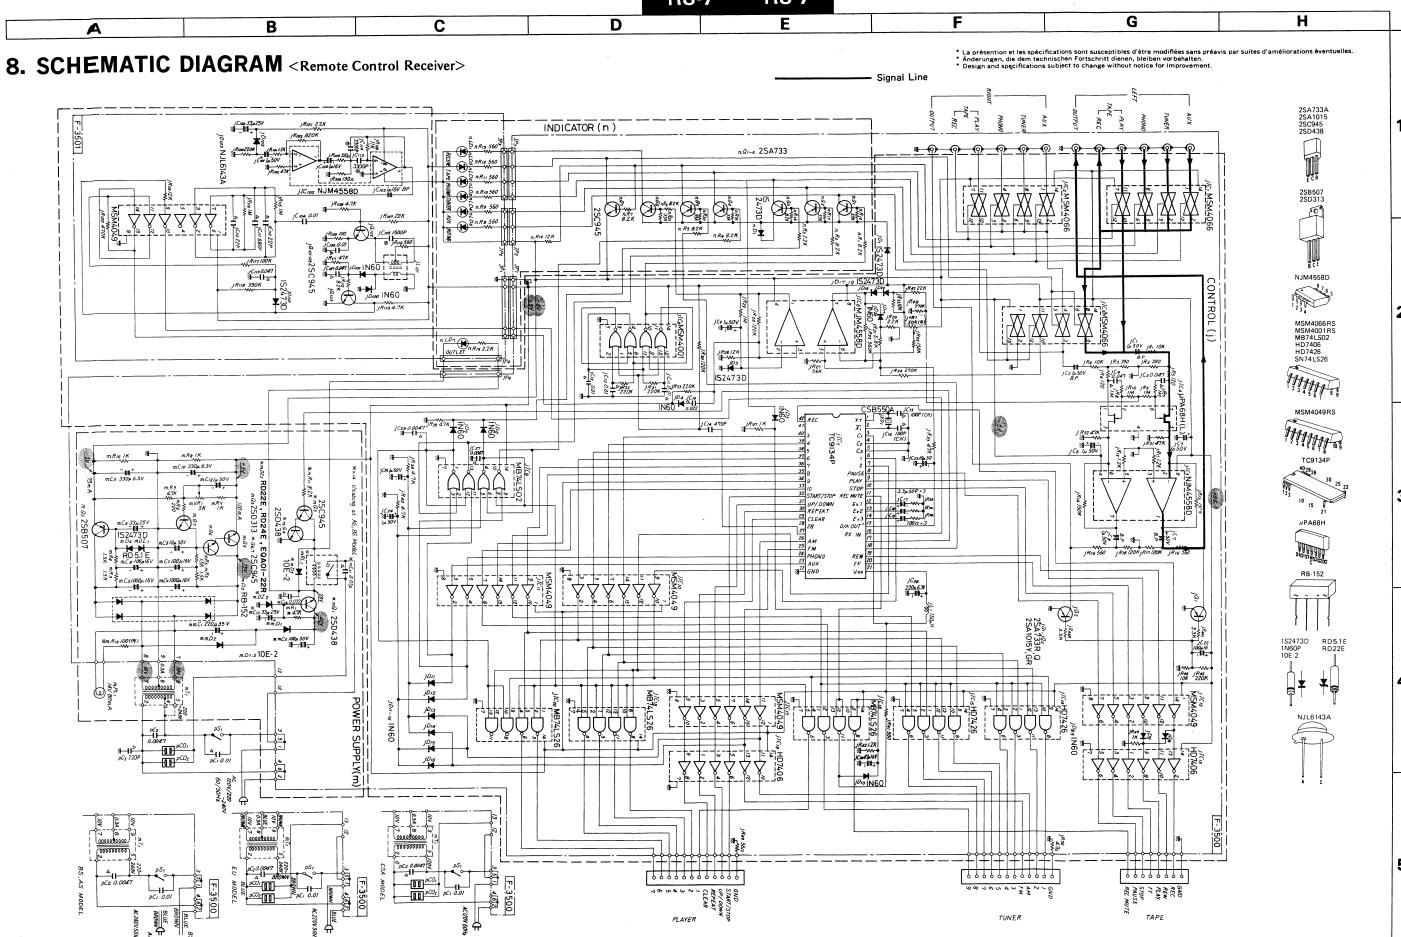

### 9. OTHER PARTS

#### 9-1. Front View

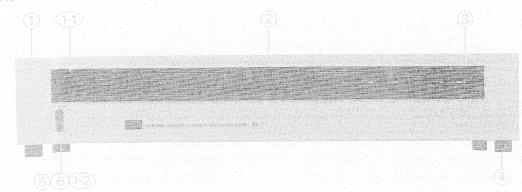

#### 9-2. Top View



Parts List <Front View>

Parts No.	Stock No.	Description
1	07721500	Front Panel Ass'y (Silver Model)
	07721400	Front Panel Ass'y (Black Model)
1-1	07738710	Smoked Plate (Silver Model)
	07700610	Smoked Plate (Black Model)
1-2	07628100	Push Knob Guide (Silver Model)
	07595600	Push Knob Guide (Black Model)
2	07601400	Bonnet
3	07721200	Dial Scale
4	07601200	Leg
5	07194500	Push Switch, power
6	07579800	Push Knob, power (Silver Model
Ŭ	07580000	Push Knob, power (Black Model)

Parts List <Top View>

Parts No.	Stock No.	Description
1	46026901	Power Transformer
2	38004700	Power Supply Cord
3	39106000	Strain Relief
4	07189600	AC Outlet
5	07249000	Input Terminal Board 2P
6	07249100	Input Terminal Board 4P
7	07601810	Side Panel (R)
8	07267600	Pilot Lamp 14V 80mA
9	07601710	Side Panel (L)

# 10. ADJUSTMENT <See Top View>

#### 10-1. Vod Voltage Adjustment

• Check that the DC Voltage between the jumper wire, JW67 (+) on the substrate F-3500 and the ground is within 5V  $\pm$  0.2 V. If out of this allowable range, regulate the voltage by adjusting the mVR1 on the substrate F-3500.

#### 10-2. Pre-set Level Adjustment

- 1) Do not depress Volume Control Buttons of Transmitter, RS-7.
- 2) Feed 1 kHz sine-wave signal from audio oscillator to input terminals (tuner), L and R of Receiver, RS-7.
- 3) Set output level of audio oscillator to 150 mV.
- 4) Connect VTVM to the output terminal of Receiver, RS-7 and adjust for 150 mV by jVR1 on the substrate F-3500.




### 11. REPLACEMENT

#### 11-1. Replacement of 12KHO15A Transmitter Circuit Board

- 1. Remove the lid of Battery Case.
- 2. Remove a screw on the Battery Case.
- 3. Take out the Transmitter Case (bottom), after moves this case (bottom) in the arrow direction.

#### <Bottom View>

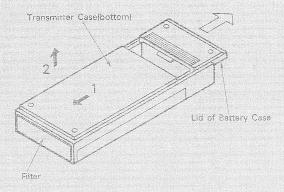



SANSUI ELECTRIC COMPANY LTD.: SANSUL ELECTRONICS CORPORATION:

SANSUI ELECTRONICS (U.K.) LTD. SANSUI ELECTRONICS G.M.B.H.

14-1, Izumi 2-chome, Suginami-ku, Tokyo 168 Japan PHONE:(03) 323-1111/TELEX:232-2076 1250 Valley Brook Ave. Lyndhurst, N.J. 07071 U.S.A. 333 West Alondra Blvd. Gardena, California 90247 U.S.A. 3036 Koapaka 5t. Honolulu, Hawaii 96819 U.S.A. Unit 10A, Lyon Industrial Estate, Rockware Avenue, Greenford, Middx U86, OAA, England Arabella center, 6 Frankfurt AM Main, Lyoner Strasse 44-48, West Germany